 




BLUESky

DT-888

**OPERATING MANUAL FOR
DIGITAL CORDLESS PHONE**

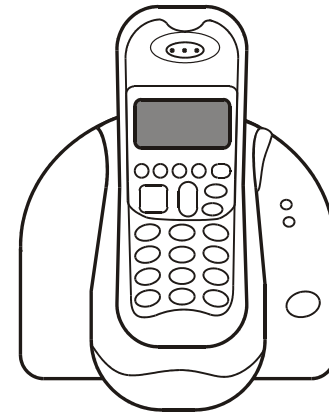

Caller ID Service:

With the use of Caller ID (Calling Line Identification Services) available from your local telephone company, you can see the telephone number of the calling party. Please dial the service phone number at 4121111 then followed by 666# to check it your local telephone company provides with the service.

Be sure to review these instruction carefully prior to use to ensure complete understanding of the unit




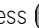





Welcome

Congratulation on your purchase of the DT-888 Digital Cordless Phone! You now possess one of the most sophisticated telephone on the market today. The unit can fulfill virtually all telephone needs. Be sure to review these instructions carefully prior to use to ensure complete understanding of the unit. There are many new features to be explored.

Table of Contents

1.	Features-----	2
2.	Accessories & contents-----	2
3.	Legend-----	3
4.	Installation-----	5
5.	Normal operation-----	6
	A. User's setting	
	1.Clock setting-----	6
	2.Ring setting-----	-6
	3.Setting language-----	-7
	4.Change the name of handset-----	-7
	5.Ring Priority-----	8
	6.Key Pak Lock-----	-8
	B. Operation	
	1.Make call-----	8
	2.To receive a call-----	-9
	3.Caller ID Memory-----	-9
	4.Receiver volume control-----	9
	5.Mute-----	-10
	6.Redial-----	-10
	7.Paging-----	-10
	8.Phone book-----	-10
	9.Alarm-----	12
	10.Call duration-----	-12
	11.Flash-----	-12
	12.Pause-----	-12
	C. Advanced operation	
	1.To register an additional handset-----	13
	2.To select base unit-----	-14
	3.To delete the handset-----	-14
	4.Call transfer-----	-14
	5.Conference call-----	-15
	6.Intercom-----	15
	7.Dialing-----	-15
	8.Monitor-----	15
	9.flash.pause-----	16
	10.PABX-----	16
	11.Warning tone-----	16
	12.Call Barring-----	17
	13.Factory Default-----	-18
6.	Trouble shooting-----	18

13.Reset to factory default

Press  to select BASE → Press  → Press  to select ADVANCED → Press 
 The LCD will display PIN → Press your PIN code → Press  → Press  to select
 DEFAULT → Press , the LCD will display CONFIRM? → Press  to confirm the
 setting → Press  to exit from the setting mode and return to standby mode.

6.Trouble Shootings

If your DT-888 does not work, please check the problem as follows or contact the store where you bought the unit.

Don't disassemble and replace any parts yourself.

Problem	Possible Cause	Action Taken
Charging indicator does not light while the handset is in charge	1. Error connection or lack of power supply 2. Bad connection between Base and handset	1.Ensure the supplied AC adapter is correctly connected 2. Keep the unit and adapter dust free by wiping it with a soft, dry cloth
Handset does not work	1. Handset may not be correctly connected 2. Battery is not correctly inserted	1. Charge the battery for at least 12 hours 2. Make sure the handset is correctly connected
Can not make call	External line is out of work	Contact your local telephone company

- Confirm tone on or off

Press select HANDSET → press → press select TONES → press → Press select CONFIRM → press → press select YES or NO → press to confirm, a beep sound → press and hold until exit set up.

- Warning tone for battery low on and off

Press select HANDSET → press → press select TONES → press → Press select LOW BATT → press → press select YES or NO (press to confirm, a beep sound → press and hold until exit set up.

- Range (if unit is out of coverage, it will emit a tone, if set to ON)

Press select HANDSET → press → press select TONES → press → press select RANGE → press → press select YES or NO → press to confirm, a beep sound → press and hold until exit set up.

12. Call Barring

The unit can be used as call controller.

Press to select BASE → Press → to select ADVANCED → Press the LCD will display PIN → Enter the current PIN code → Press the LCD will display CALL BAR to confirm the setting is correct otherwise the LCD will display PIN PROT → Press → Press to select HANDSET1, HANDSET2, HANDSET3... → Press → Press to select OFF, LOCAL, NATIONAL or INTERNAL → Press → Press to exit call barring programming and return to standby mode.

NOTE: There are three sections you can restrict your DT-888

- Local – For local call only
- National – Strict any number beginning with 0
- International – Strict any number beginning with 00


1.Features

1. 2-line LCD display
2. Talk time display
3. External/Intercom
4. 30 phone book entries
5. 5 ringing melodies & volume selection on handset and base
6. Voice volume adjustable during conversation
7. PIN for each handset
8. Call ID features
9. Mute/redial
10. Alarm
11. Hand free Speaker
12. Conference
13. Call Transfer

2.Accessories & Contents

1. Base x 1
2. Handset x 1
3. Adaptor x 1
4. 1.2V Ni-Mh Battery x 2
5. Telephone Line x 1
6. Chinese/English Manual x 1

3. Legend

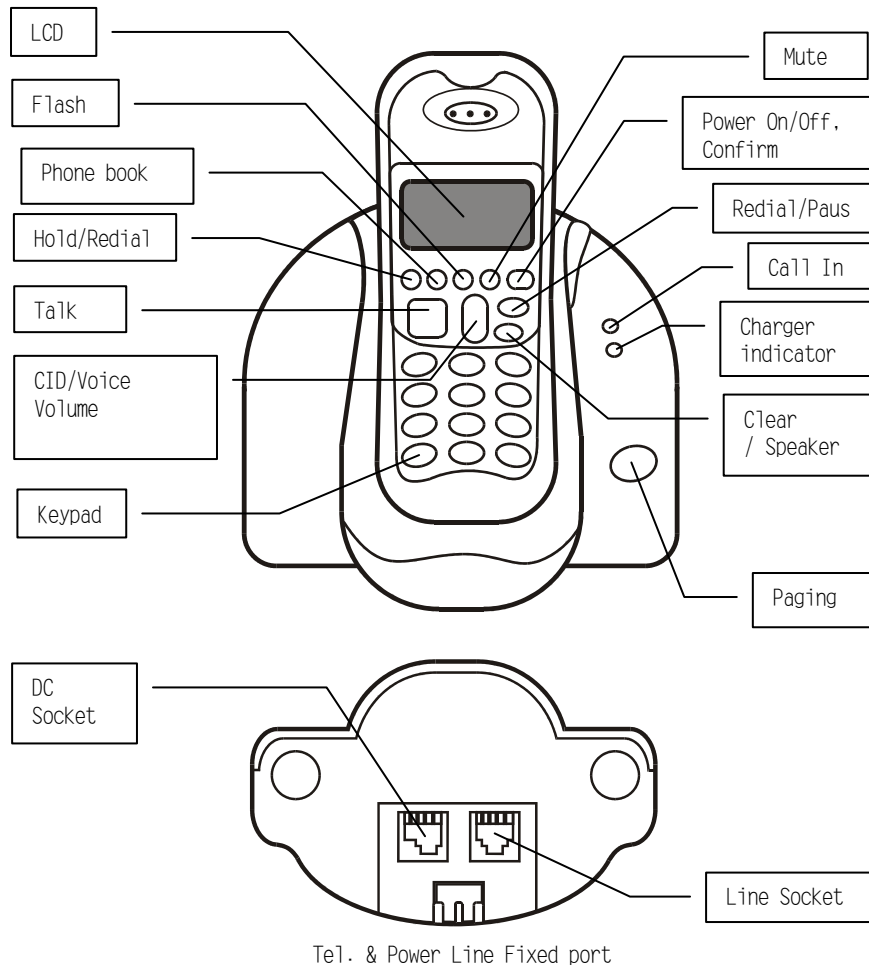

• Basic Operation

Call the other handset on MONITOR mode, by pressing **INT** followed by the handset number. The called handset will automatically take the line and the caller will ear the condition of the room. The caller press **📞** to stop the room monitoring. The other handset in MONITOR MODE will automatically replace to the standby mode.

9. Pause

The unit can select the pause duration while connecting to the PABX system
 Press **▲** to select BASE → Press **OK** → Press **⬆** to select ADVANCED → Press **OK**
 The LCD will display PIN → press your PIN number → Press **OK** → Press **⬆** to select PABX PAUSE → Press **OK** → Press **⬆** to select PAUSE → Press **OK** → Press **⬆** to select the pause duration from 3-5 seconds. → Press **OK** to confirm the setting.

10. PABX

If your DT-888 is used with PABX, Press **R/P** to change your PABX code. If your PABX code is 9: Press 9 before dial a desired number. If you already set 9 as your PABX code, you just need to press **R/P** Inst instead.

Press **▲** to select BASE → Press **OK** → Press **⬆** to select ADVANCED → Press **OK**
 The LCD will display PIN → Press your PIN number → Press **OK** → Press **⬆** to select PABX → Press **OK** → Press **⬆** to select PBX CODE → Press **OK** → Press your PABX code → Press **OK** to confirm the setting → Press **📞** until return to standby mode.

11. Warning Tones (This will set tones on or off)

• Key tone on or off

Press **▲** select HANDSET → press **OK** → press **⬆** select TONES → press **OK** → press **⬆** select KEY → press **OK** → press **⬆** select YES or NO → press **OK** to confirm, a beep sound → press and hold **📞** until exit set up.

5. Conference call

If you have more than one handset, you can have a three (3) conference call with another handset and an external call.

When you are engaged in external call → press **INT** followed by the handset number where you wish to have a conference call → Once the other handset has been connected → press **INT** **#** on your handset to active conference call.

If you wish to leave the conference call → press **END** to exit.

6. Call Shuttle

If you have more than two handsets registered into base then you can make internal communication.

Select the handset number → press **INT** → The selected handset ring, press **END**.

7. Dialing mode (The area of Taiwan which PULSE, it is already set, please do not change)

Press **▲** select BASE → Press **OK** → Press **▲** select ADVANCED → press **OK**, LCD display PIN, enter code → press **OK**, LCD display PIN CODE → press **▲** select DIAL MODE → press **OK** → press **▲** select TONE/PULSE → press **OK** → press **▶** and hold until exit set up.


Note : Handset number which is the expanding handset, (1-5) of number which set by you.

8. Monitor

Monitor mode is used for baby sitter or room monitoring. You can have one handset registered to your DT-888 base, the other handset can be set Monitor mode.

• Monitor on/off

Press **▲** to select BABYSIT → Press **OK** → Press **▲** to select YES/NO → Press **OK** to confirm the setting.

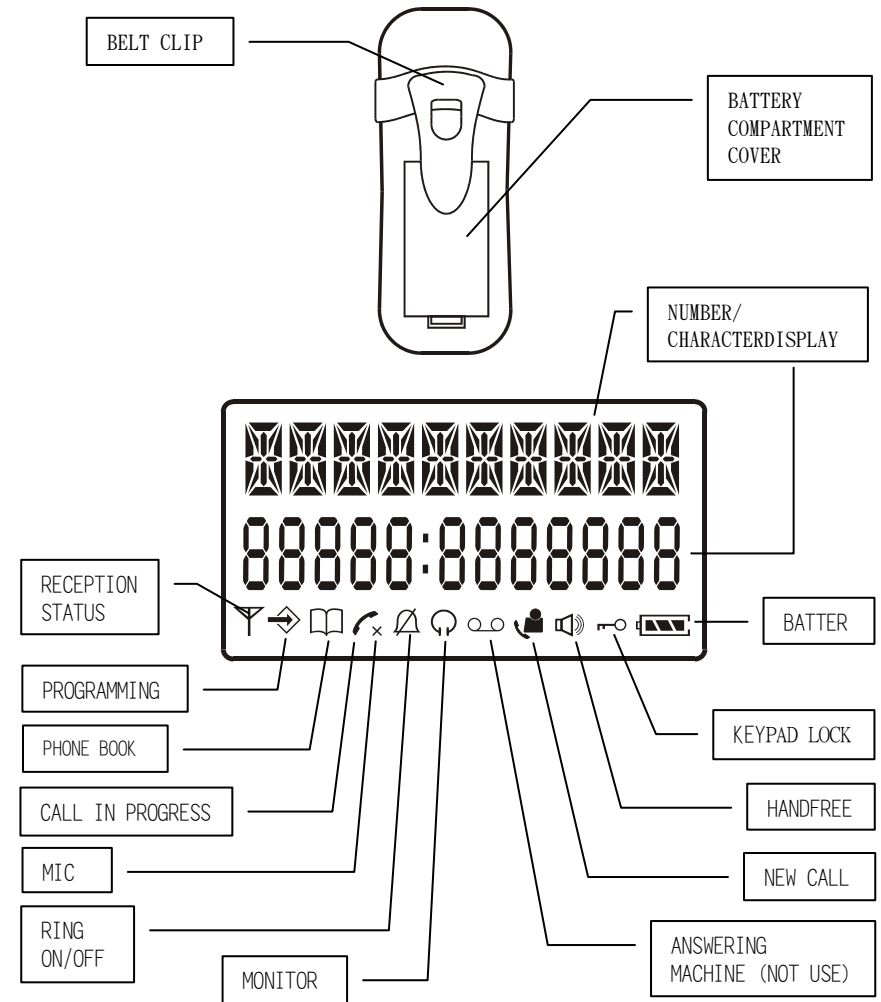

4. Installation





1. Connect the supplied adapter to a 110 VAC wall outlet
2. Remove the compartment cover and insert 2 batteries following the polarity diagram
3. Put the handset on the base, the charge indicator will light up. Please charge at least 12 hours for first time use.

Important notice:

1. Use the correct power AC110V/60HZ
2. Don't disassemble this product, it contains no user-serviceable parts
3. Do not recommend for anyone who are using the heart detector or similar equipment.
4. Do not expose this product to dust, strong sun light, humidity, high temperature or mechanical shock.

2.To select Base unit

The handset can be register 4 bases





Press  select REGISTER → press  → LCD display BS 1 2 3 4 5. One (1) is flashing indicate that this handset has been register to base 1 → Press 2, to select that this handset will be register to another base #2 → LCD display PIN ,Enter the present PIN code of your DCT100 system. (default code is 0000). → Press  → press and hold  , until it will emit 2 beeps. Release the page button. Now

your handset will chose base #2.

3.To delect the handset




If you have many handset register the same base, you can select to unrigister handset .

If you only one handset registered.You can not unrigister it .

Press  select BASE → press  → press  select ADVANCED → press  , LCD display PIN → enter CODE 0000 → press  (if display PIN PROT, This means your PIN is wrong.) → press  selec DEL HS → press  → press  select HANDSET 1 2 3 4 5(select unrigister handset). → press  , display CONFIRM → press  to confirm → press and hold  until exit the programming .

4.Transferring an external call / External Call Hold

If your have more than one handset registered to your DCT100 base, you can transfer the external call to this handset .

When you are engaged in external call → press  followed by the handset number where you wish to transfer the call. While calling the other handset, the external call is is on HOLD.Once the other handset has been connected → press  on your handset to transfer the call.If the other handset is no answer or do not want to take the external call → press  to return to the external call.





C. Advance setting

1.To register an additional handset

The unit is a GAP compliant (Generic Access Profile) which can access and interwork with other GAP DECT. You can register up to five GAP DECT handsets.

The handset number is displayed at the right side upper corner of the LCD of your handset. It is label as 1 to 5. Your original handset is the first to be registered to your base,so, it is labeled as HANDSET 1.

To register another handset to base; you should know system PIN code. This is a numerical digit code (maximum of 8 digits). It was preset to 0000. You can changed this PIN code if you like that your cordless phone system will not access by other person.

Press  select REGISTER → press  → LCD display BS 1 2 3 4 5, One (1) is flashing indicate that this handset has been register to base 1. → Press 2, to select that this handset will be register to another base #2 → LCD display PIN, Enter the present PIN code of your DCT100 system. (default code is 0000). → Press  → press and hold , until it will emit 2 beeps. Release the page button. Your base is now in subscription mode. until it will emit 2 beeps. Release the page button. Your base is now in subscription mode.

5.Basic Operating








Note: In this manual  means  up and down key.

A. Setup










1.Clock setting

- Clock On/Off

The handset can be used as clock, Please follow the instruction below to set the time and day.




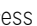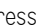


Press  to select HANDSET → Press  → Press  to select CLOCK → Press  → Press  To select on/off → Press  → Press  to exile the setting

- Time/Date setting



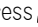




Press  to select HANDSET → Press  → Press  to select CLOCK → Press  → Press  To select SET CLOCK → Press  → the hour should be flickering. Press number to set HOUR: Press  to set TIME/DATE → Press  to confirm the setting. → Press  to exile.

2.Ring Setting

- The handset allows you to select 5 level of ring volume

Press  to select HANDSET → Press  the LCD will display VOLUME → Press  → Press  to select the voice volume →  to confirm the setting → Press  to exile.

- Handset ring melody for external call

Press  to select HANDSET → Press  → Press  to select EXT RING → Press  → Press  to select the ring melody → Press  to confirm the setting → Press  to exile.

- Handset melody set for internal call

Press to select HANDSET → Press → Press to select INT RING → Press → Press to select ring melody → Press to confirm the setting → Press to exit the setting

- Base ring volume (The base unit has 5 level of ring volume for your selection)

Press to select BASE → Press → Press to select RINGER → Press → Press to select VOLUME → Press → Press to select the volume level → Press to confirm the setting → Press to return to standby mode

- Base ring melody (The base has 5 ring melody for your selection)

Press to select BASE → Press → Press to select RINGER → Press → Press to select MEMLODIES → Press → Press to select ring melody → Press → Press The unit will return to the standby mode

3. Language selection

Press to select LANGUAGE menu → Press → Press to select ENGLISH or ITALIANO → Press the unit will return to Standby mode

4. Handset name

Press to select HANDSET menu → Press → Press to select HS NAME → Press → Key in the name with maximum 8 characters → Press to delete a character to the left side of the cursor or add character by pressing the correct letter. → Press a confirmation tone is heard → Press To exit HANDSET NAME or repeat step 3 to 6 → Press to exit handset programming mode and return to standby mode.

9. Alarm

- Select “on” or “off” the alarm clock.

Press select HANDSET → press → press select ALARM → press → press select SET ALARM → press → press to select YES or NO → Press to confirm, a beep sound → press and hold until exit ALARM.

- Alarm time setting

Press select HANDSET → press → press select ALARM → press → press to select ALARM TIME → press → press digit to enter the number, press to select to hours or minutes → press to confirm, a beep sound → press and hold until exit ALARM.

10. Call duration

The unit will display the time you take in using the handset during conversation.

This feature can be turn on and off.

Press to select HANDSET → press → press select TIMER → press → press to select YES or NO → Press to confirm, a beep sound → Press and hold until exit setting.

11. Flash (flash time 95ms, this features not work for all PABX)

The busy tone during the call and press to get a new dial tone for next dialing.

12. Pause

During the dialing just press , LCD display "P", the pause which 3 seconds pause time, this Features only work with small PABX to seize the line.

- Editing an store data

Press ▲ select PHONEBOOK → press OK → Press ▲ select EDIT → press OK → press ▲ to select editing data. → press OK → press ▲ to dele old data, enter new data → press OK to confirm, a beep sound. → LCD display NUMBER? → press ▲ to delete old number, enter new number → press OK to confirm, a beep sound. → press ▲ to exit EDIT or repeat the same process for editing more data → press OK twice to return standby mode ◦

- Delete individual stored data

Press ▲ select PHONEBOOK → press OK → press ▲ select DELETE → press OK → press ▲ select delete data → press OK → LCD display number, if correct press OK → LCD display CONFIRM? → press OK to delete, a beep sound → press ▲ to exit DELETE or repeat the process to delete more data. → press ▲ twice to return standby mode ◦

- Delete all stored data

Press ▲ select PHONEBOOK → press OK → press ▲ select DEL ALL → press OK → LCD display CONFIRM? → press OK, delete all data, a beep sound → press ▲ twice to return standby mode ◦

5. Ring Priority

- The unit allows you to set the ring priority on handset or base. You can set the number of rings on the device prioritized before other will ring.

Press ▲ to select BASE → Press OK → Press ▲ to select RINGER → Press OK → Press ▲ to select PRIORITY → Press OK → Press ▲ to select YES or NO for ring priority → Press OK → Press ▲ to return to standby mode.

- When Ring Priority set “on” position, it is nessarry to select “Ring Priority” on handset or base. (The Caller ID features will not work at this mode)

Press ▲ select base → press OK → press ▲ to select RINGER → press OK → press ▲ to select PRIORITY → press OK → press ▲ to select SETUP → press OK → press ▲ to select ring priority as base or handset 1-5 → press OK → press ▲ to select rings → press OK → press ▲ exit set up ◦

6. Key Pad Lock






To prevent accidental dialing, use the KEYPAD LOCK Mode. Your DCT100 will not respond to any key except press ▲ .

Press ▲ to select KEY LOCK → press OK → press ▲ to select YES or NO → press OK to confirm ◦ LCD display 🔒 to show the key pad had already lock ◦

B. OPERATION

1. To make a Call

- Pick up handset and dial the number, LCD display dialed number, if made mistake, press ▲ To delete the number then enter number again, if correct press ▲ to dial out the number.

- To make a call from phonebook ◦ press **PB** → press  to search the name you want to call → press  , The person' s telephone number will appear on the LCD. The unit will seized the line and dialed the number ◦
- To make a call from Caller ID list (call back) ◦ press  → press  search the name you want to call → press  , The person' s telephone number will appear on the LCD. The unit will seized the line and dialed the number ◦

Note: If it no caller ID feature the LCD display EMPTY ◦




Press  for handsfree dialing and speaking.

2.To receive A Call

When ringing, pick the handset and press  or place the handset on table then press  for handsfree conversation.

3.Caller ID Memory

Up to 25 different caller and time are stored from the most recent to the oldest in the caller list ◦

Press  → LCD display caller list → press **OK** → LCD display caller number → press **OK** → LCD display caller time → press  to view next caller number → press  to exit Caller list ◦

The individual caller number can be delete by press **OK** until the LCD display CONFIRM → press **OK** to confirm , a beep sound , then the number delete ◦

NOTE: If it had not phone call then the LCD display EMPTY ◦




4.Receiver Volume control

During the conversation, press  to adjust the level ◦


5.Mute

During on line, if you don' t want the other party hear your conversation with someone, press  to silenced your talking. Press  once again, to go back conversation again.

6.Redial

press **R/P** →  , the last called telephone will be automatically redialed again. Press **R/P** →  to browse the last called 10 number , press  , the select number will be dial out ◦




7.Paging

This feature is very useful if you can't remember where you put your handset – you can make it ring by pressing 

All registered handsets will ring. You can stop each handset by pressing any key on the handset keypad

8.Phonebook

• Storing Name and number

Press  select PHONEBOOK → press **OK** , Select NEW → press **OK** , LCD display NAME? (enter name) → press **OK** to confirm, a beep sound → LCD display NUMBER? → enter telephone number (up to 16 digits) → press **OK** to confirm , a beep sound → press  to exit NEW or repeat the process to enter new name or phone number. → press  to exit the programming mode.