
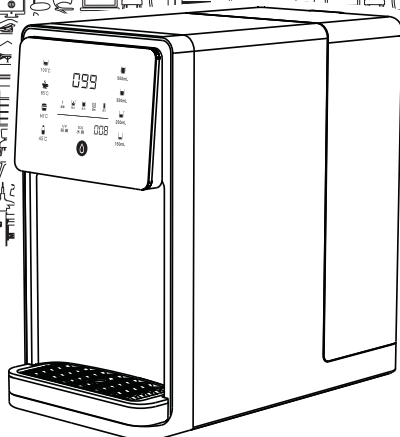


SABA

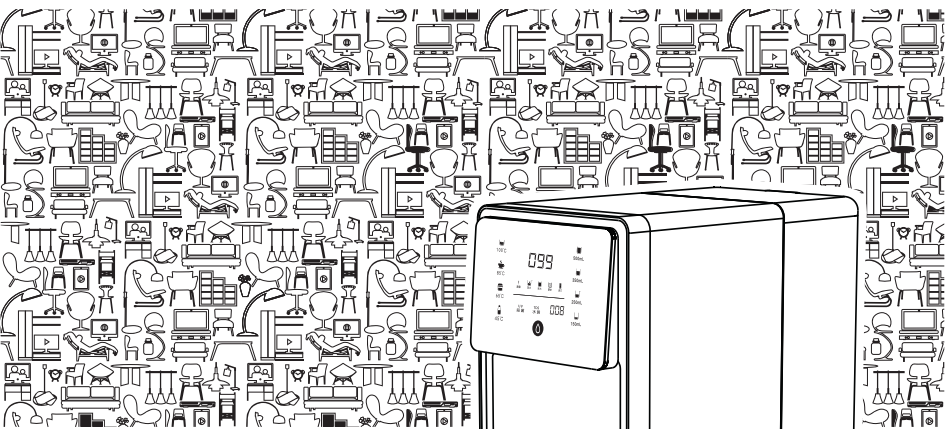

> 使用說明書 Instruction Manual

免安裝RO即熱式開飲機(家庭用)

SA-HQ02

Read this booklet thoroughly before using and save it for future reference

目錄

免責聲明	1
緊急處理方法&警告	1
安全注意事項	2
各部位名稱	3
使用方法	4-5
維護保養	5
濾芯拆裝方法	5
簡易故障排除	6
產品規格	7
濾芯介紹	7
限用物質含有情況標示	7

免責聲明

本手冊經仔細檢查及校對，但仍不排除文字拼寫及技術錯誤之可能，若因錯誤導致與實機不符時，以實機為準，此種錯誤或疏漏不能當呈堂的依據，其將於新版予以修正。

本手冊之全部內容，本公司享有隨時修改之權利，且不另行通知。

緊急處理方法&警告

當發生異常或有燒焦味時，應立即停止使用，並與本公司服務專線聯絡或就近經銷商洽詢，若在異常狀態下繼續使用易發生火災之危險。

為了避免火災或是電擊的危險，請勿讓本機暴露於雨中或濕氣中。

電源請確實插牢於電源插座內，以免因未插牢而引起插頭產生高熱，而造成意外。

電源線或電源底座若損壞時，請速與本公司服務專線聯絡或就近經銷商洽詢

安全注意事項

在使用本機之前，應仔細閱讀下列事項及使用說明，閱後並請妥為收存，以備將來參考：

- 請使用帶有漏電保護開關和接地線的三芯插座。
- 本機所用源水溫度應在4~40°C，且不適於室外或可能有水噴濺的地方使用。
- 本機應放置平坦的地方，以免傾倒跌落。
- 機器背面應距離牆面15CM以上，以利於機器散熱，應遠離高溫或太陽直射的場所。
- 水箱中的水接近用完時，要注意及時加水。
- 長期停用，應用”強制排水”功能排光機器內部存水，並關閉機器背後的電源開關。
- 如電源線已損壞，為避免危險，請送回售後服務據點檢測/維修 進行更換。
- 在機器使用中，如發現機器有漏水現象，請送回售後服務據點檢測/維修。
- 當機器經過使用內部管路有存水，如需移動機器，請務必使用”強制排水”功能，將機器內部存水/餘水排盡並拔下插頭斷開電源，以避免危險。
- 本機上方不得放置任何雜物，以免影響水源或影響整機使用壽命。
- 禁止幼兒按壓熱水按鈕或觸摸出水口部位，以免燙傷。
- 本機為數位開飲機，為智慧電子控制，停電不能使用。
- 孩童應受監護，以確保孩童不嬉玩電器。
- 本電器不預期供生理、感知、心智能力、經驗或知識不足之使用者(包含孩童)使用，除非在對其負有安全責任的人員之監護或指導下安全使用。

⚠ 注意

本開飲機出水含有未經加熱完成之水質應確實定期更換濾心並確保水源符合飲用水質標準。


溫馨提示

- 初次使用，水箱內存水也許會變為白色，此為正常現象，請放心使用。
- 初次使用，按取水鍵也許不出水，請稍等待，以便機器制水，再作正使用。
- 當機器通電後，請先進行機器清洗。之後按取水鍵認可正常取用常溫水，再使用取熱水功能
- 長期不使用機器或需移動機器時，應倒掉水箱內存水，使用”強制排水”能排清內部存水，然後斷開電源，以免發生機器內部漏水，損壞機器。

水箱換水提示


- 當水箱處”最小”水位線應及時進行換水，以確保安全引用濾淨水質，同時避免增加RO濾芯負載，造成需提早更換RO濾芯。
- 為珍惜水源，換水時，水箱內的循環水可充分利用於澆花、清潔...等用途，讓環境更美好。

各部位名稱

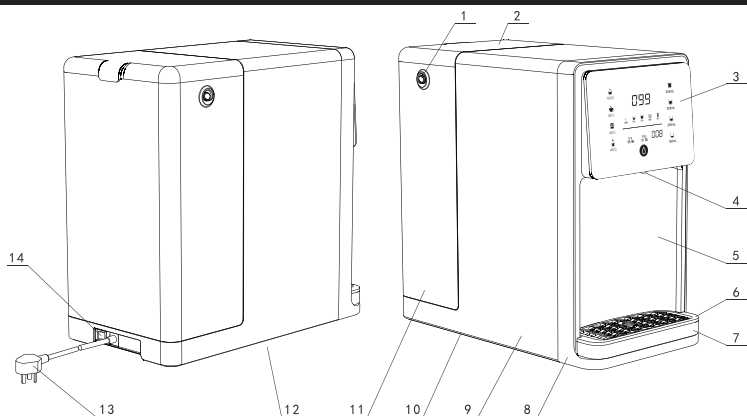





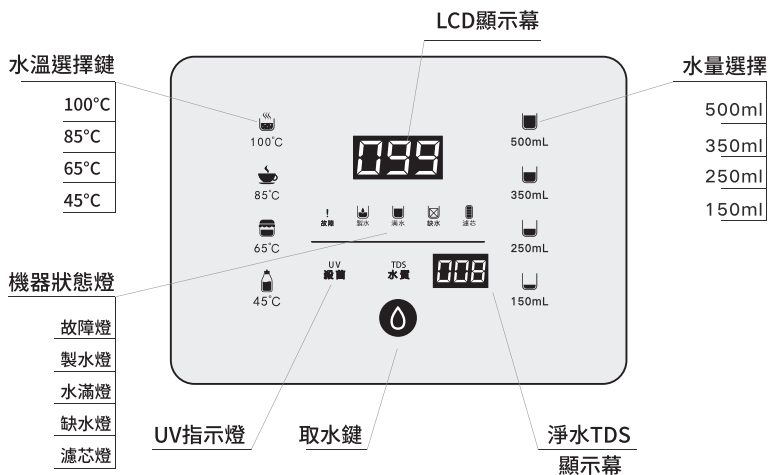





- | | | | |
|--------|--------|-------|---------|
| 1 水箱提手 | 5 面板 | 9 外殼 | 13 電源線 |
| 2 水箱蓋 | 6 接水盒蓋 | 10 底板 | 14 電源開關 |
| 3 顯示面板 | 7 接水盒 | 11 水箱 | |
| 4 出水口 | 8 前殼 | 12 底部 | |

顯示面板介紹








使用方法

機器清洗	取常溫水	取熱水	停止取水	強制排水	濾心復位
 水箱裝滿水  (製滿水後) 雙擊取水鍵 排光內部存水 清洗3次或更多 新機器剛使用時 長時間停用後	 選水量 默認500mL  單擊取水鍵	 選水量 默認500mL  選水溫  單擊取水鍵	 單擊取水鍵 取水中途需停止時	 雙擊取水鍵 機器需移動時 將長時間停用時	 長按3秒取水鍵 濾芯更換後

※ 首次使用或長期停用後，確保能取到常溫水後，取兩次以上500mL沸水並倒掉，以保障飲用水的新鮮和健康。

- 將本機平穩地放置在通風處，掀開水箱蓋取走水箱，然後將濾芯按順序依次擰緊裝好。
- 水箱裝好水後（水面不可高於“MAX”刻度），放置於機器上並蓋回水箱蓋。
- 將電源插頭插入三芯接地插座中，打開機器背後的電源開關，機器各狀態燈亮起顯示機器所處狀態，同時機器進入正常工作狀態，開始抽取源水進行過濾，存至內部淨水箱。

燈號+E字碼	排除說明
缺水燈  亮起 + 顯示E1	表示水箱缺水或水箱已拿開
缺水燈  亮起 + 顯示E2	表示內部淨水箱缺水或水位處於低水位
製水燈  亮起	表示機器正在往內部淨水箱製水
水滿燈  亮起	表示機器內部淨水箱已製滿水
濾芯燈  亮起 + 顯示1或2或3	機器提示更換濾芯: 1-前置PAC, 2-RO濾芯, 3-後置C2濾芯

- 當機器初始使用或長時間停用，應進行至少3次機器清洗：
將水箱清洗乾淨後裝滿水，安放至機器上，打開機器電源開關，待機器製滿水（水滿燈 亮起），取大容量水杯準備好於出水口處接水，再雙擊取水鍵進行排水以進行機器內部管路的清洗，直至出水口不再有水流出，單擊取水鍵停止排水，此為1次機器清洗循環。

- ※ 至少要進行3次循環的機器清洗，視各地方不同水質，水質較差，可進行3次以上的清洗。
- ※ 若準備盛水容器容量不夠大時，排水時可單擊取水鍵停止放水，倒掉水後再次雙擊取水鍵取水，直至出水口處不再有水流出。

使用方法


- 飲用常溫水的使用方法：直接單擊“取水鍵”即可取常溫水。顯示面板上有四檔水量選擇，選取某檔水量後，單擊“取水鍵”將取到該檔定量的常溫水，如不選擇，系統默認500mL。取水中途，如單擊“取水鍵”，機器將結束當前取水工作，停止出水。（單擊“水量選擇鍵”或單擊“取水鍵”，對應的指示燈將會亮起）
- 飲用熱水的使用方法：單擊“水溫選擇鍵”選擇某檔水溫後，再單擊“取水鍵”，將取到對應該檔溫度的熱水。如需要選擇水量，在按“取水鍵”前選好水量檔位，將取到對應該檔水量的熱水。同樣，如不選擇水量，系統默認500mL。取水中途，如單擊“取水鍵”，機器將結束當前取水工作，停止出水。（單擊“水溫選擇鍵”，對應的指示燈也同樣會亮起）
- 當機器長期停用或需移動機器等情況，應使用“強制排水”功能排清機器內部餘水/存水。
- 機器工作狀態下，也許您會取不到水。此時可能因用水量過大，機器內部淨水箱水量不足，請稍等片刻，同時也應檢查水箱是否缺水，如水箱缺水應及時加水。

維護保養

- 維護保養之前，請先強制排水，排空內部存水，接著關閉電源開關，再將電源插頭拔掉，遠離帶電物體。
- 排水方法：機器通電狀態下，取大容量水杯準備好於出水口處接水，在雙擊取水鍵進行排水，直至出水口不再有水流出，排水完畢。
- 機器對濾芯壽命有檢測，當機器提示更換濾芯時，請及時更換對應的濾芯。（為確保用水安全，請使用本公司正品濾芯）
- 可使用任何非磨擦性或中性日用洗滌劑清潔機身表面，但應避免水進入機體內。
注意：此器具不得浸入水中清洗！

濾芯拆裝方法

將濾芯插進濾芯座，右擰為擰緊
如需拆下濾芯，向左擰下濾芯即可

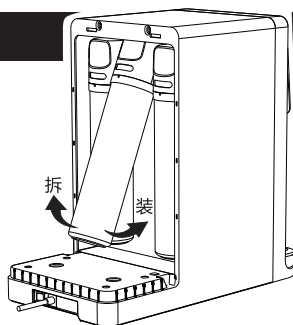

簡易故障排除

故障碼/故障現象	可能原因	排除方法
 	前置及後置濾芯需要更換	1、更換前置及後置濾芯 2、長按“取水鍵”3秒復位
 	RO反滲透濾芯需要更換	1、更換RO反滲透膜濾芯 2、長按“取水鍵”3秒復位
 	1、水箱缺水 2、水箱未放穩/水箱已拿開	1、給水箱加水 2、將水箱放回原位並放穩 3、將水箱提起再放回
 	內部淨水箱缺水	1、稍等一會待淨水箱有水 2、如源水箱缺水應加水 3、將水箱提起再放回
 	內部溫度探頭異常	請送回售後服務據點 檢測維修
不能取常溫水	1、機器未通電 2、按鍵未觸控到位 3、內部淨水箱缺水	1、給機器通電 2、重新觸按”取水鍵”以取水 3、稍等一會待機器製水
不能取常溫水	1、機器剛上電，防乾燒保護 2、內部淨水箱缺水	1、先取一小杯常溫水 2、稍等一會待機器製水
機器漏水	1、接水盒已水滿 2、機器內部漏水	1、清空接水盒 2、關閉電源，聯繫服務據點
水中有異味	1、新機器剛開始使用 2、機器長時間未用 3、濾芯未及時更換	1、水箱裝滿水後待機器製滿水，再雙擊取水鍵強製排空內部存水。至少進行三次 2、更換濾芯
其他故障		請送回售後服務據點 檢測維修

產品規格

額定電壓/頻率:110V~/60Hz

總額定消耗電功率:1500W

水箱容量:7公升

產品尺寸:220x470x420mm

產品重量:6.8kg

商品原產地:中國

包裝清單:

PAC 活性碳PP濾芯x1、RO逆滲透濾芯x1、C2複合式濾芯x1、說明書(含保證書)x1

※ 濾芯放置於機體內

濾芯介紹

1

PAC 活性碳PP濾芯

過濾異色異味,餘氯,改善口感,濾除細菌、氟化物重金屬、鐵銹、泥沙及各種質氧化物。

6~12個月壽命

2

RO逆滲透濾芯

過濾精度達到0.001~0.0001微米,只允許水分子通過,對水中所含的雜質如農藥、細菌、重金屬離子等有害物質幾乎全部截留排除。

12~24個月壽命

3

C2複合式濾芯

有效濾除水中的餘氯氣異鼻異味等,調節口感使水更甘冽。

6~12個月壽命

限用物質含有情況標示

揭露網址:<http://59.124.114.85/download/ROHS/A0139.pdf>

Table of contents

Table of contents	8
Names of main parts	9
Introduction of display panel	10
Main parameters of performance	10
Method of use	11-12
Precautions	12
Maintenance	13
Disassembly method of filter cartridges	13
Simple troubleshooting steps	14

Note: After adding water to the water tank, please wait a few minutes after turning the power on. Press the water button and make sure that the faucet has can release water of normal temperature, before taking hot water. The power socket must have a reliably grounded three-hole plug socket and a protector to prevent leakage!

Note: With the development of technology and the improvement of product appearance, the appearance and technical parameters are subject to change without prior notice, and it' s based on the product itself.

SABA is a trademark of Technicolor SA used under license by IFI HK. Ltd

ENVIRONMENT-FRIENDLY DIPOSAL 廢電池請回收




You can help protect the environment!

Please remember to respect the local regulations:

Hand in the non-working electrical equipments to an appropriate waste disposal centre.


廢電池未妥善回收處理可能造成環境衝擊及人體危害:
電池棄置時應交至電池回收中心處理
請勿隨意丟棄

Names of main parts

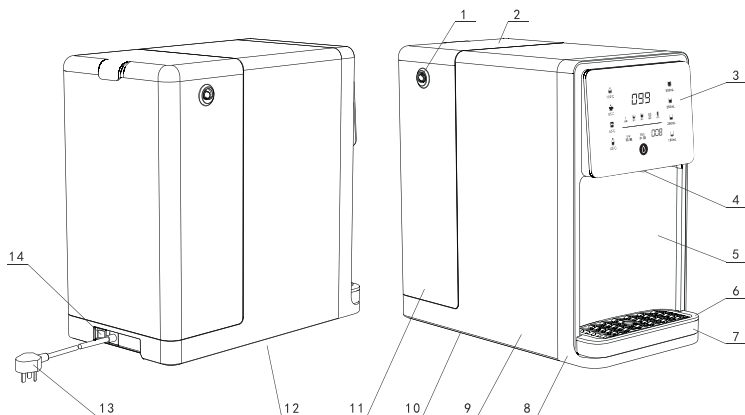

Serial number	Name of part	Serial number	Name of part
1	Water tank handle	8	Front cover
2	Water tank cover	9	External cover
3	Display panel	10	Base plate
4	Faucet	11	Water tank
5	Plate	12	Power cable
6	Water box lid	13	Power switch
7	Water box		

Introduction of display panel

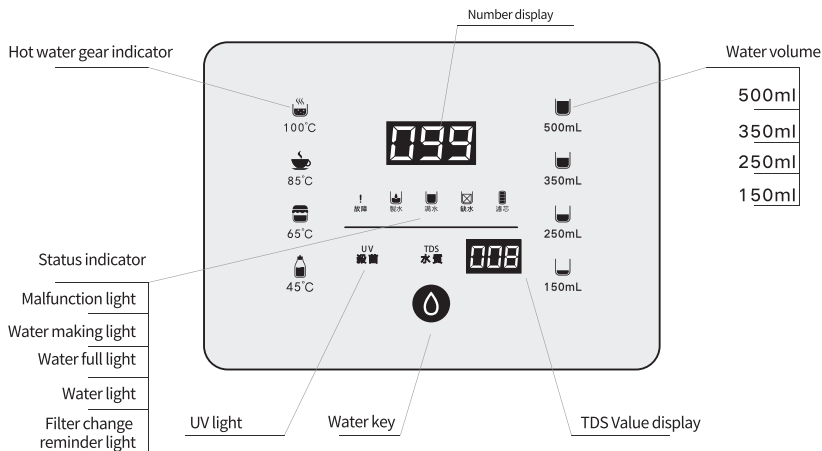












Main parameters of performance

Rated voltage	110V~
Rated frequency	60Hz
Rated power	1500W
Water tank capacity	7L

Packing list

Portable RO Instant Hot Water Purifier	1 set
Front filter cartridge with composites	1 piece
Alkaline water filter cartridge	1 piece
Rear activated carbon filter cartridge	1 piece
Manual	1 copy

Method of use

<p>Cleaning the machine</p>  <p>fill the water tank with water</p>  <p>(after making it full) double-click the cleaning button</p> <p>drain all the internal water, and clean 3 or more times</p> <p><small>This method is applicable when the new machine has just been used, or it's being reused after a long time of inactivity.</small></p>	<p>Take water of normal temperature</p>  <p>select the amount of water the default volume is 500ml</p>  <p>click the water button</p> <p>and the water will be discharged after 3 seconds.</p>	<p>Take hot water</p>  <p>select the amount of water the default volume is 500ml</p>  <p>unlock the child lock key</p>  <p>select the water temperature</p>  <p>click the water button and the water will be discharged after 3 seconds</p>	<p>Stop taking water</p>  <p>click the water button</p> <p>and the water will be discharged after 3 seconds.</p> <p><small>This is applicable when you need to stop while taking water</small></p>	<p>Forced drainage</p>  <p>double-click the cleaning button to drain the internal water</p> <p><small>This is applicable when you need to move the machine or when you have to stop using it for a long time</small></p>	<p>Reset the filter cartridge</p>  <p>press and hold the water button for 3 seconds</p> <p><small>after the filter cartridge is replaced</small></p>
---	---	--	--	--	--

Note: If you're using the machine for the first time, or if you have to stop using it for a long time, make sure that after taking water of normal temperature, take 2 times or above of 500ml-boiled water and pour them away before using the machine. This can ensure that you water is fresh and clean.

- Place the machine in a well-ventilated place, open the water tank cover and remove the water tank, then tighten the filter cartridges in order.
- After the water tank is filled with water (the water surface cannot be higher than the "MAX" mark), place it on the machine and cover the water tank cover.
- Insert the power plug into a three-core grounded socket, turn on the power switch on the back of the machine. The status lights of the machine indicate different statuses of the machine. At the same time, the machine enters the normal working state, and starts to draw raw water for filtration, the machine then stores it in the internal water purification tank.

Shortage in raw water tank light is on + E1 displays	Indicates that the water tank is short of water or the water tank has been removed.
Shortage in water purification tank light is on + E2 displays	Indicates that the internal water purification tank is short of water or the water level is low.
Make water light is on	Indicates that the machine is making water to the internal water purification tank.
Water full light is on	Indicates that the water purification tank inside the machine is full
Filter cartridge light flashes	Replace the corresponding filter cartridge and reset it after it's done.

- When the machine is in initial use or if it has been stopped using for a long time, at least clean the machine three times: After cleaning the water tank, fill it with water and place it on the machine. Turn on the machine's power switch. Wait for the machine to be filled with water (that is, when the water full light is on). Take a water cup with large capacity ready to take water at the water outlet, double-click the clean button to drain the water and to clean the internal pipes of the machine. When no more water is flowing out of the outlet, click the water button to stop the drainage. This is a full cleaning cycle of the machine.
Note: at least 3 cycles of machine cleaning are required. Depending on the water quality in each place, if the quality of water is relatively poor, you can perform this cleaning step for more than 3 times.
Note: if the capacity of your water cup is not big enough, when draining the water, you can click the water button to stop the drainage. After pouring the water away, double-click the cleaning button again to take the water, until no more water flows out of the outlet.
- How to take water of normal temperature: click the "water key" to get water of normal temperature. There is a key to select water volume on the display panel. After selecting a certain volume of water, click "water key" to get a fixed amount of water of normal temperature. If you do not select it, the system defaults it to 500ml.
When you're taking water, if you click the "water key" again, the machine will end the current process of taking water, and water will then stop flowing out (when you click the water volume selection key or click the "water key", the corresponding indicator will light up).
- How to take hot water: click the "child lock" key to unlock, then press the "water temperature selection key" to select a certain water temperature, click the "water key" to get the hot water corresponding to the temperature. If you need to select the water volume, select it before pressing the "water key", and you will get hot water corresponding to the water volume. If you do not select the water volume, the system defaults to 500ml. During the process of taking hot water, if you click the "water key", the machine will end the current process and stops releasing water.

Method of use

- When the machine has not been used for a long time or needs to be moved, the "forced drainage" function should be disabled to clear the remaining water / stored water inside the machine.
To perform forced drainage, double-click the "water key" to drain water from the outlet and any stored water inside.
- When the machine is working, you may not get water. At this time, due to excessive water consumption, there may be insufficient water in the water purification tank. Please wait for a while and check whether the water tank is short of water. If it is the case, add water in time.

Precautions

Kind reminder

- You must use a three-hole socket with a reliable ground and a switch to prevent leakage.
- When the machine is working, the water in the water tank may turn white. This is a normal phenomenon. Please rest assured.
- When you're using the machine for the first time, the water may not come out after you press the water key. Please wait for the machine to make water before using it normally.
- When the power of the machine is on, clean the machine first. Then press the water key to recognize taking water of normal temperature, then use the hot water key function.
- When the machine will not be used for a long time or when it needs to be moved, the water in the water tank should be drained, use the "forced drainage" function to drain the internal water, then disconnect the power supply to avoid water leakage inside the machine, which would damage the machine.

_____ Please read the following points in _____
detail for other instructions.

- Use a three-pin socket with a switch to prevent leakage and a ground wire.
- The temperature of the raw water used in this machine should be 4-40 degrees Celsius, and it is not suitable for outdoor use or places where water may be splashed.
- The machine should be placed stably to avoid falling.
- The back of the machine should be more than 15cm away from the wall to facilitate the heat dissipation of the machine. Keep away from high temperature or direct sunlight.
- When the water in the water tank is nearly used up, make sure to add water in time.
- For long-term use, apply the "forced drainage" function to drain the water stored in the machine, turn off the power switch on the back of the machine to cut off the power.
- If the power cord is damaged, to avoid danger, be sure to contact the manufacturer, an authorized repairer or a competent professional to replace it.
- During the use of the machine, if you find that the machine is leaking water, please contact the manufacturer and an authorized repairer to check and confirm that there is no fault in the machine before putting it back into use.
- When the machine has water stored in the internal pipeline, and if it accidentally causes the machine to fall, be sure to contact the manufacturer and an authorized repairer to check and confirm that the machine is not faulty before it can be put into use again.
- The machine must not be cleaned with splashed water.
- Do not place any sundries on the machine, so as not to affect the water source or the service life of the whole machine.
- Do not place any sundries on the machine, so as not to affect the water source or the service life of the whole machine.
- This machine is a digital water drinking machine, which is controlled by intelligent electronics. It cannot be used when the power is off.
- To avoid burning, when the machine is in use, do not allow children to play with the faucet of the water drinking machine.


Maintenance

- Before maintenance, please force drain all the water until it's completely empty in the internal storage. Then, turn off the power switch and unplug the power plug. Turn off the power switch, then unplug the power plug. Put it away from charged objects.
- Draining method: when the power of the machine is turned on, double-click the "clean button", and the water / residual water inside the machine will be discharged from the drainage head at the bottom of the machine.
- The machine has a life test of the filter cartridges. When there is an alert from the machine asking you to the filter cartridge (the corresponding filter cartridge icon flashes), please replace the corresponding filter in time. (To ensure safety of water use, please use our original filter cartridges)
After replacing the filter cartridge, please press and hold the water button for 3 seconds to reset the filter cartridge.
- Use any non-abrasive or neutral daily detergent to clean the surface of the machine, but please avoid the water to enter the body of the machine.
Note: This appliance must not be soaked in water for cleaning purposes!

Disassembly method of filter cartridges

Insert the filter cartridge into the filter cartridge seat and tighten it to the right.

To remove the filter cartridge, unscrew the filter cartridge to the left.

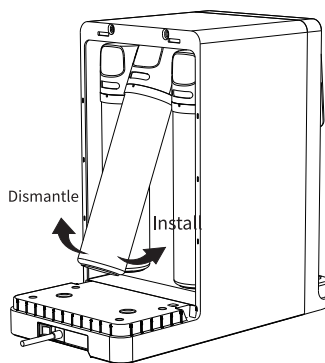

The flowchart of filter

1

PAC filter cartridges of composites

Filters off color and odor, remove chlorine, improves taste, filters out bacteria, fluoride, heavy metal, rust, sediment and various slag oxides.

6-12 months of life

2

UF ultrafiltration membrane

It can filter and separate the particles, colloids and organics in the water, intercept the microorganisms, algae, bacteria and harmful substances in the water; meanwhile, it can retain the trace mineral elements beneficial to human body in the water; it has large water flow, is not easy to block, and can be repeatedly washed and used.

12-36 months of life






3

C2 rear activated carbon filter cartridges

It can effectively filter out residual chlorine and odor in the water, adjust the taste to make it better.

6-12 months of life

Simple troubleshooting steps

Defect code/defect	Possible causes	Solutions
PAC or C2 flashes	The front and rear filter cartridges need to be replaced	<ol style="list-style-type: none"> 1. Replace the front and rear filter cartridges 2. Press and hold the "water key" for 3 seconds to reset
UF ultrafiltration membrane	The filter element of the ultrafiltration membrane needs to be replaced	<ol style="list-style-type: none"> 1. Replace the ultrafiltration membrane filter 2. Press the "water key" for 3 seconds to reset.
 	<ol style="list-style-type: none"> 1. Lack of water in the water tank 2. The water tank is not set firm / the water tank is open 	<ol style="list-style-type: none"> 1. Add water to the water tank 2. Return the water tank to its original position and stabilize it. 3. Lift the water tank and put it back
 	Lack of water in the water purification tank	<ol style="list-style-type: none"> 1. Wait for a while until there is water in the water purification tank. 2. If there is shortage of water in the raw water tank, please add some. 3. Lift the water tank and put it back.
	The internal temperature probe is abnormal	Contact an authorized repairer or manufacturer
Unable to take water of normal temperature	<ol style="list-style-type: none"> 1. The machine is not powered on 2. The keys have not been pressed in place 3. The internal water purification tank is short of water 	<ol style="list-style-type: none"> 1. Turn the power of the machine on. 2. Press the water button again to take water 3. Wait a moment for the machine to make water
Unable to take hot water	<ol style="list-style-type: none"> 1. The machine has just been powered on and is being protected against dry burning. 2. Water shortage in the internal water purification tank 	<ol style="list-style-type: none"> 1. Take a small cup of water of room temperature first 2. Wait for a while for the machine to make water
Leakage of water	<ol style="list-style-type: none"> 1. The water box is full. 2. Internal leakage of the machine. 	<ol style="list-style-type: none"> 1. Empty the water box. 2. Turn the power off and contact the repair company.
Odor in the water	<ol style="list-style-type: none"> 1. The new machine has just started being used. 2. The machine hasn't been used for a long time. 3. The filter cartridges haven't been replaced in time. 	<ol style="list-style-type: none"> 1. After the water tank is full, wait for the machine to make water, then double-click the water key to force empty the internal water storage. Do this at least three times. 2. Replace the filter cartridge.
Other errors		Contact an authorized repairer or manufacturer

非常感謝您：

承蒙惠購本產品，本公司除表達最高謝意外，並將本著一貫的服務精神，隨時為您提供最佳服務，在您使用前務請詳閱本說明書，並依正確方法使用，閱讀完畢後請妥為保管，以備日後使用參考。

商品保證書

機型：**SA-HQ02**

購買日期： 年 月 日

顧客	姓名	電話:
	地址	
經銷商		

- 一.上列保證書應確實填寫，並蓋有經銷商店章始為有效。
- 二.免費服務年限為一年，自購買日起一年內，在正常使用下，如發生故障，則免費維修，但人為或天災地變或蟲害，不在此限。(如需服務換修零件，則按本公司服務規定，收取維修費)。
- 三.收費服務年限為兩年，收費服務兩年內，如需維修則按本公司服務規定，收取維修費。
- 四.自然耗材不在保固範圍內(例：電池、充電電池、天線、磁頭、雷射頭、耳機、遙控器、信號線、燈泡、刀具組、濾網、線材與隨機附贈之軟體及其他配件...等)。
- 五.本保證書遺失恕不補發，但如需服務，則依出廠日期，計算保證年度。
- 六.本商品無外修服務，如有另行約定則外出檢修費，依本公司規定收取；若發生故障請送回原購買經銷商或親洽本公司所屬營業所。
- 七.本商品維修範圍僅於“台、澎、金、馬”(需付擔一趟郵資)，其餘地區請自付來回郵資。
- 八.MP3、音響...等產品送修時，內存的資料(數位、類比)有可能流失，建議送修前請先行備份，若有資料遺失之情形，本公司將不負任何賠償責任，郵寄維修視同同意本條款。
- 九.本商品使用於營利商業用時，其保證期限按保證書所載期限減半保固。
- 十.任何商品會因為科技的不斷追求創新，推陳出新過程中不排除商品原始設備的硬體規格，無法滿足屆時的雲端技術、軟體搭配支援與最低硬體基本需求時，商品原始設備將自動停止雲端後台服務使用!本公司商品硬體保固一年，仍會不斷推出新相關類型商品，再歡迎繼續購買使用。

宣告：

說明書經仔細檢查及檢對，但仍不排除文字拼寫及技術錯誤之可能，此種錯誤或疏漏將於新版予以修正。
本手冊之全部內容，本公司享有隨時修改之權利，且不另行通知。

消費者專線及售後服務據點

台北 (02) 8990-4440 新北市五股區五工三路116巷6號
台中 (04) 2479-0960 台中市南屯區黎明路一段533號
高雄 (07) 371-4688 高雄市仁武區仁雄路96號

服務據點地址及電話有變更之可能，請上官網查詢最新資訊
【<http://wonder.tw>】



線上客服

加入 旺德官方LINE@
旺德ID: @wonder.tw
重要資訊及活動不錯過

委製/進口商

旺德電通股份有限公司

新北市五股區五工三路116巷6號
服務專線:(02)8990-4440
E-mail:service1@wonder.tw